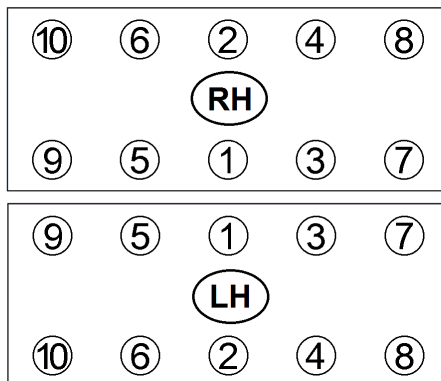
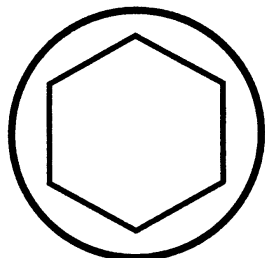


**Anziehvorschrift Zylinderkopf****Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****156.090**passend für / suitable for  
adaptable à / adaptable a**Das Original**Schraubenkopf / Head shape    Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornilloAnziehen/  
Tightening/  
Serrage/  
Apriete

- ⊙ Pos. 1-10: 80 Nm
- Pos. 1-10: 90°
- Pos. 1-8: 60°
- Pos. 9 LH: 40°
- Pos. 9 RH: 60°
- Pos. 10: 60°

**Zeichenerklärung / Explanations / Explication / Explicacion**

|  |                                             |                              |                                |                                       |
|--|---------------------------------------------|------------------------------|--------------------------------|---------------------------------------|
|  | neue Zylinderkopf-schrauben verwenden       | use new cylinder head bolts  | utiliser des vis neuves        | emplar tornillos nuevos               |
|  | Warmlauf (80°C)                             | warm up time (80°C)          | chauffage (80°C)               | calentamiento (80°C)                  |
|  | Schrauben einzeln lösen und wieder anziehen | loosen and tighten each bolt | deserrer et serrer vis par vis | aflojar y apretar tornillo a tornillo |
|  | Setzzeit                                    | relaxation time              | durée de tassement             | tiempo de espera                      |
|  | Drehwinkel                                  | torque angle                 | angle de serrage               | ángulo de giro                        |

**Motortyp / Engine type / Type de moteur / Tipo de motor**

Ø: 104 mm; ÷: 1,82 mm

Mot: L86

6,2 ltr V8

313 KW (426 PS)

Suburan, Yukon XL,  
Escalade ESV**Elring-Serviceteam**

Fon +49 7123 724 799

Fax +49 7123 724 798

[service@elring.de](mailto:service@elring.de)

24/10/08

**\*156.090\***