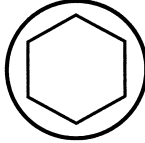


Anziehvorschrift für Zylinderkopf		236.910 passend für / suitable for adaptable à / adaptable a Corvette	 Das Original	
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
	106248 RH 95137 95137 LH 106248			
Anziehen/ Tightening/ Serrage/ Apriete	* Pos 1-10: 80 Nm ➤ Pos 1-10: 90° ➤ Pos 1-8: 60° ➤ Pos 9 LH: 40° ➤ Pos 9 RH: 60° ➤ Pos 10: 60°			
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø: 104 mm; $\frac{1}{2}$: 1,35 mm				
Mot: LT4 6,2 ltr V8 Otto				
Corvette				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*236.910*	