

Anziehvorschrift für Zylinderkopf		919.594		
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a Opel		
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
A  B 		⑨ ⑤ ① ③ ⑦ ⑩ ⑥ ② ④ ⑧		
Anziehen/ Tightening/ Serrage/ Apriete * ➤ ➤ ➤ ★ ➤ 25 Nm 65° 65° 65° 15 min 30°-45°		A Innentorx Mot. 14003805 > M11x105x1,25 Elring-ZKS 803.010 * ➤ ➤ ➤ 25 Nm 90° 90° 90°		
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor 86 Ø Mot. C 20 LET, 4 Cyl., 2,0 l (DOHC) 16 V 150 kW (204 PS)				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*919.594*	