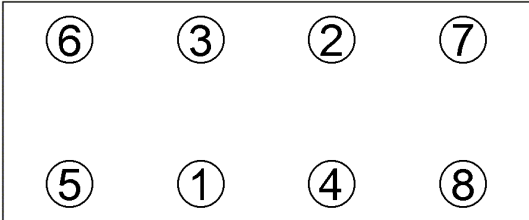


Anziehvorschrift für Zylinderkopf			517.349	 Das Original
Tightening Instructions for Cylinder Head			passend für / suitable for	
Instructions de serrage pour culasse			adaptable à / adaptable a	
Prescripciones de apriete para culatas			PSA	
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
				
167.540 M12x1,5x178				
Anziehen/ Tightening/ Serrage/ Apriete	Peugeot ZN J * 60 Nm □ 20 Nm ➤ 115° ★ 15 min ● 360 min □ 20 Nm ➤ 115°	Volvo B 28 A/E/F * 10 Nm 30 Nm 60 Nm ● 15 min □ 20 Nm ➤ 115° ★ 15 min □ 20 Nm ➤ 115°		
Zeichenerklärung / Explanations / Explication / Explicacion				
★	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
93 mm Ø, -/1,70 mm ÷				
Peugeot 604 Mot.ZN J 2849 ccm ab 1978> 110 kW (150 PS)				
Volvo 262, 264, 265, 760, 780 ab 08/1980> Mot.B28A,B28E,B28F 2,8 Ltr. V6 95/114/115 kW (129/155/156 PS)				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*517.349*	