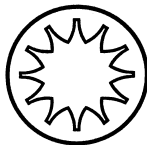
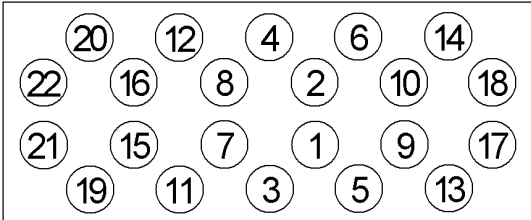


Anziehvorschrift für Zylinderkopf		833.136 passend für / suitable for adaptable à / adaptable a Mercedes-Benz	 Das Original												
Tightening Instructions for Cylinder Head															
Instructions de serrage pour culasse															
Prescripciones de apriete para culatas															
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete													
 820.114 M 10x80/102/115															
Anziehen/ Tightening/ Serrage/ Apriete		<table><tr><td>> 12/1988</td><td>01/1989 ></td></tr><tr><td>* 25 Nm M 8: 25 Nm</td><td>* 15 Nm</td></tr><tr><td>40 Nm</td><td>35 Nm M 8: 23 Nm</td></tr><tr><td>● 10 min</td><td>➤ 90°</td></tr><tr><td>➤ 90°</td><td>● 10 min</td></tr><tr><td>➤ 90°</td><td>➤ 90°</td></tr></table>		> 12/1988	01/1989 >	* 25 Nm M 8: 25 Nm	* 15 Nm	40 Nm	35 Nm M 8: 23 Nm	● 10 min	➤ 90°	➤ 90°	● 10 min	➤ 90°	➤ 90°
> 12/1988	01/1989 >														
* 25 Nm M 8: 25 Nm	* 15 Nm														
40 Nm	35 Nm M 8: 23 Nm														
● 10 min	➤ 90°														
➤ 90°	● 10 min														
➤ 90°	➤ 90°														
Zeichenerklärung / Explanations / Explication / Explicacion															
* ★ ☐ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro												
Motortyp / Engine type / Type de moteur / Tipo de motor 89 Ø Mot. M.B. 602.940, 70 kW (95 PS) M.B. 602.942/946/947, 70/72 kW 95/98 PS) 210 D, 310 D, 410 D,															
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*833.136*													