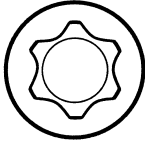
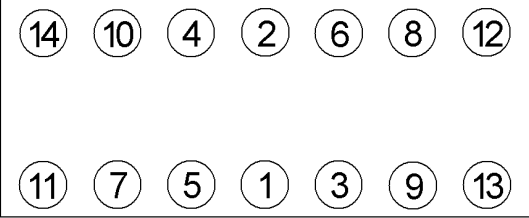


Anziehvorschrift für Zylinderkopf Tightening Instructions for Cylinder Head Instructions de serrage pour culasse Prescripciones de apriete para culatas		893.633 passend für / suitable for adaptable à / adaptable a BMW	 Das Original	
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
 802.810 M 11 x 140				
Anziehen/ Tightening/ Serrage/ Apriete				
> 1988 * 50 - 60 Nm ● 15 min ➤ 75° ★ 25 min ➤ 85° - 95°		1989 > * 50 - 60 Nm ● 15 min ➤ 90° ★ 25 min ➤ 90°		
Zeichenerklärung / Explanations / Explication / Explicacion				
*	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor Mot. M21 D24 E30 324d,td →12/1988 E28 524d,td E34 524td 80 Ø, ±1,87 mm, 3 Löcher, Holes, Trous, Agujeros, Fori				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*893.633*		