


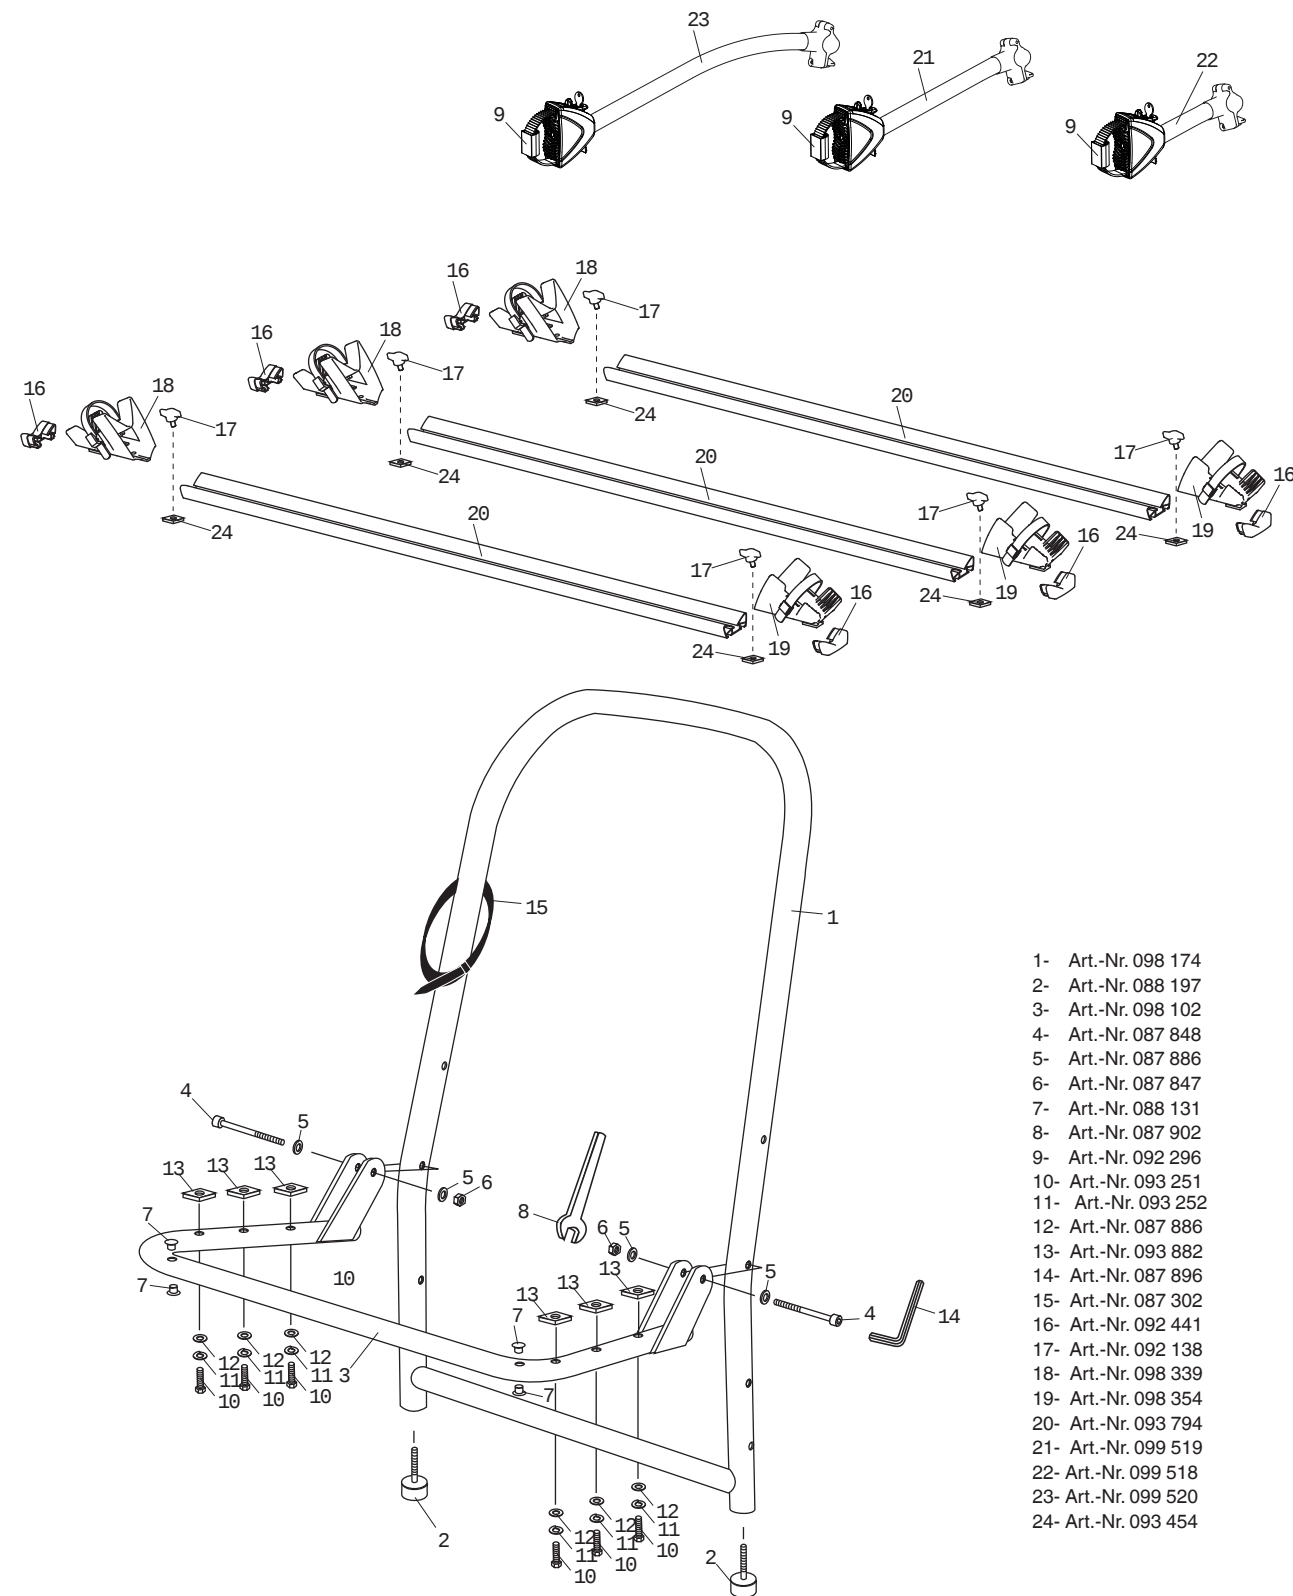


- 1- Art.-Nr. 098 174
- 2- Art.-Nr. 088 197
- 3- Art.-Nr. 098 102
- 4- Art.-Nr. 087 848
- 5- Art.-Nr. 087 886
- 6- Art.-Nr. 087 847
- 7- Art.-Nr. 088 131
- 8- Art.-Nr. 087 902
- 9- Art.-Nr. 092 296
- 10- Art.-Nr. 093 251
- 11- Art.-Nr. 093 252
- 12- Art.-Nr. 087 886
- 13- Art.-Nr. 093 882
- 14- Art.-Nr. 087 896
- 15- Art.-Nr. 087 302
- 16- Art.-Nr. 092 441
- 17- Art.-Nr. 092 138
- 18- Art.-Nr. 098 339
- 19- Art.-Nr. 098 354
- 20- Art.-Nr. 093 794
- 21- Art.-Nr. 099 519
- 22- Art.-Nr. 099 518
- 23- Art.-Nr. 099 520
- 24- Art.-Nr. 093 454

D Benutzer-Information


Part-No.: 024 500
Basisrahmen / Edelstahl
Van/Transporter

Hinweis:
Dieser Basisrahmen kann nur in Kombination mit
einem fahrzeugspezifischem Montagekit (Art.-Nr. 021...) **verwendet werden!**

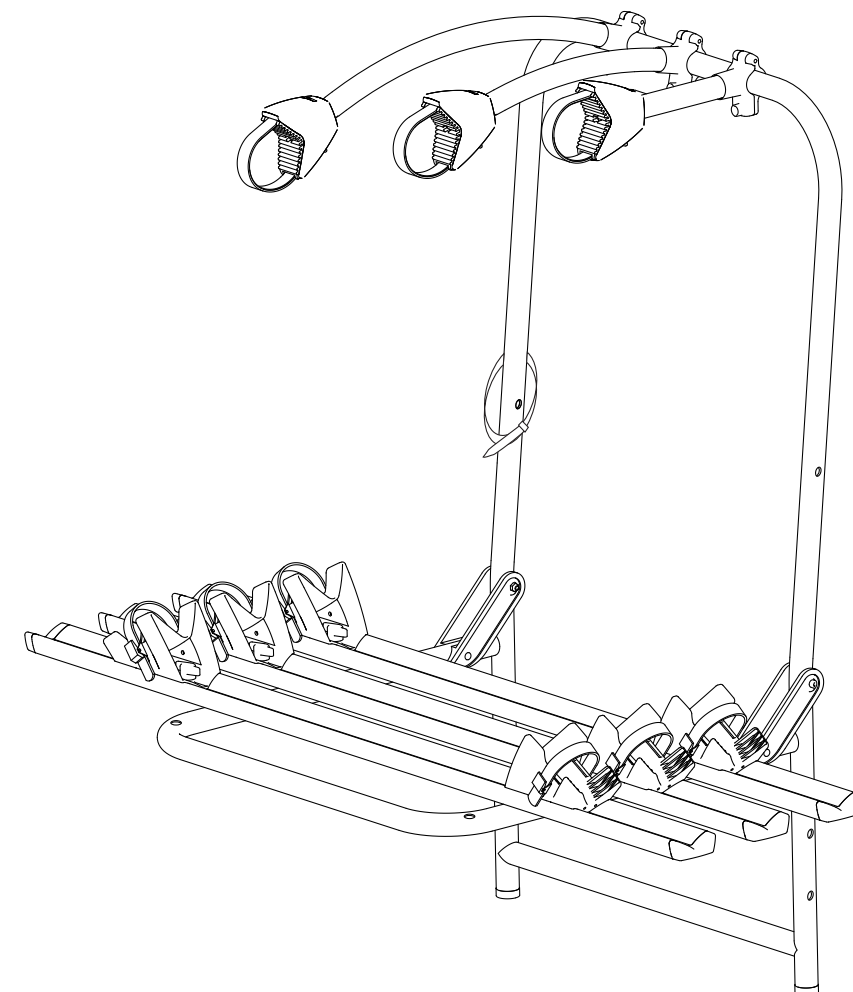


**Part-No. :
024 500 =**


**13,7
kg**




**max. 4x 15 kg
= 60 kg max.**

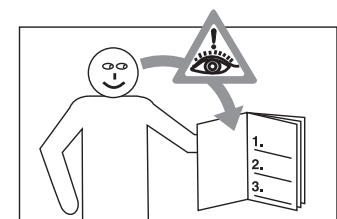


Schienenbügel mit dem Gabelschlüssel und Inbusschlüssel an den Rahmen montieren. Schrauben nur so fest anziehen, daß sich der Schienenbügel noch bewegen läßt. (ca. 2 Nm).

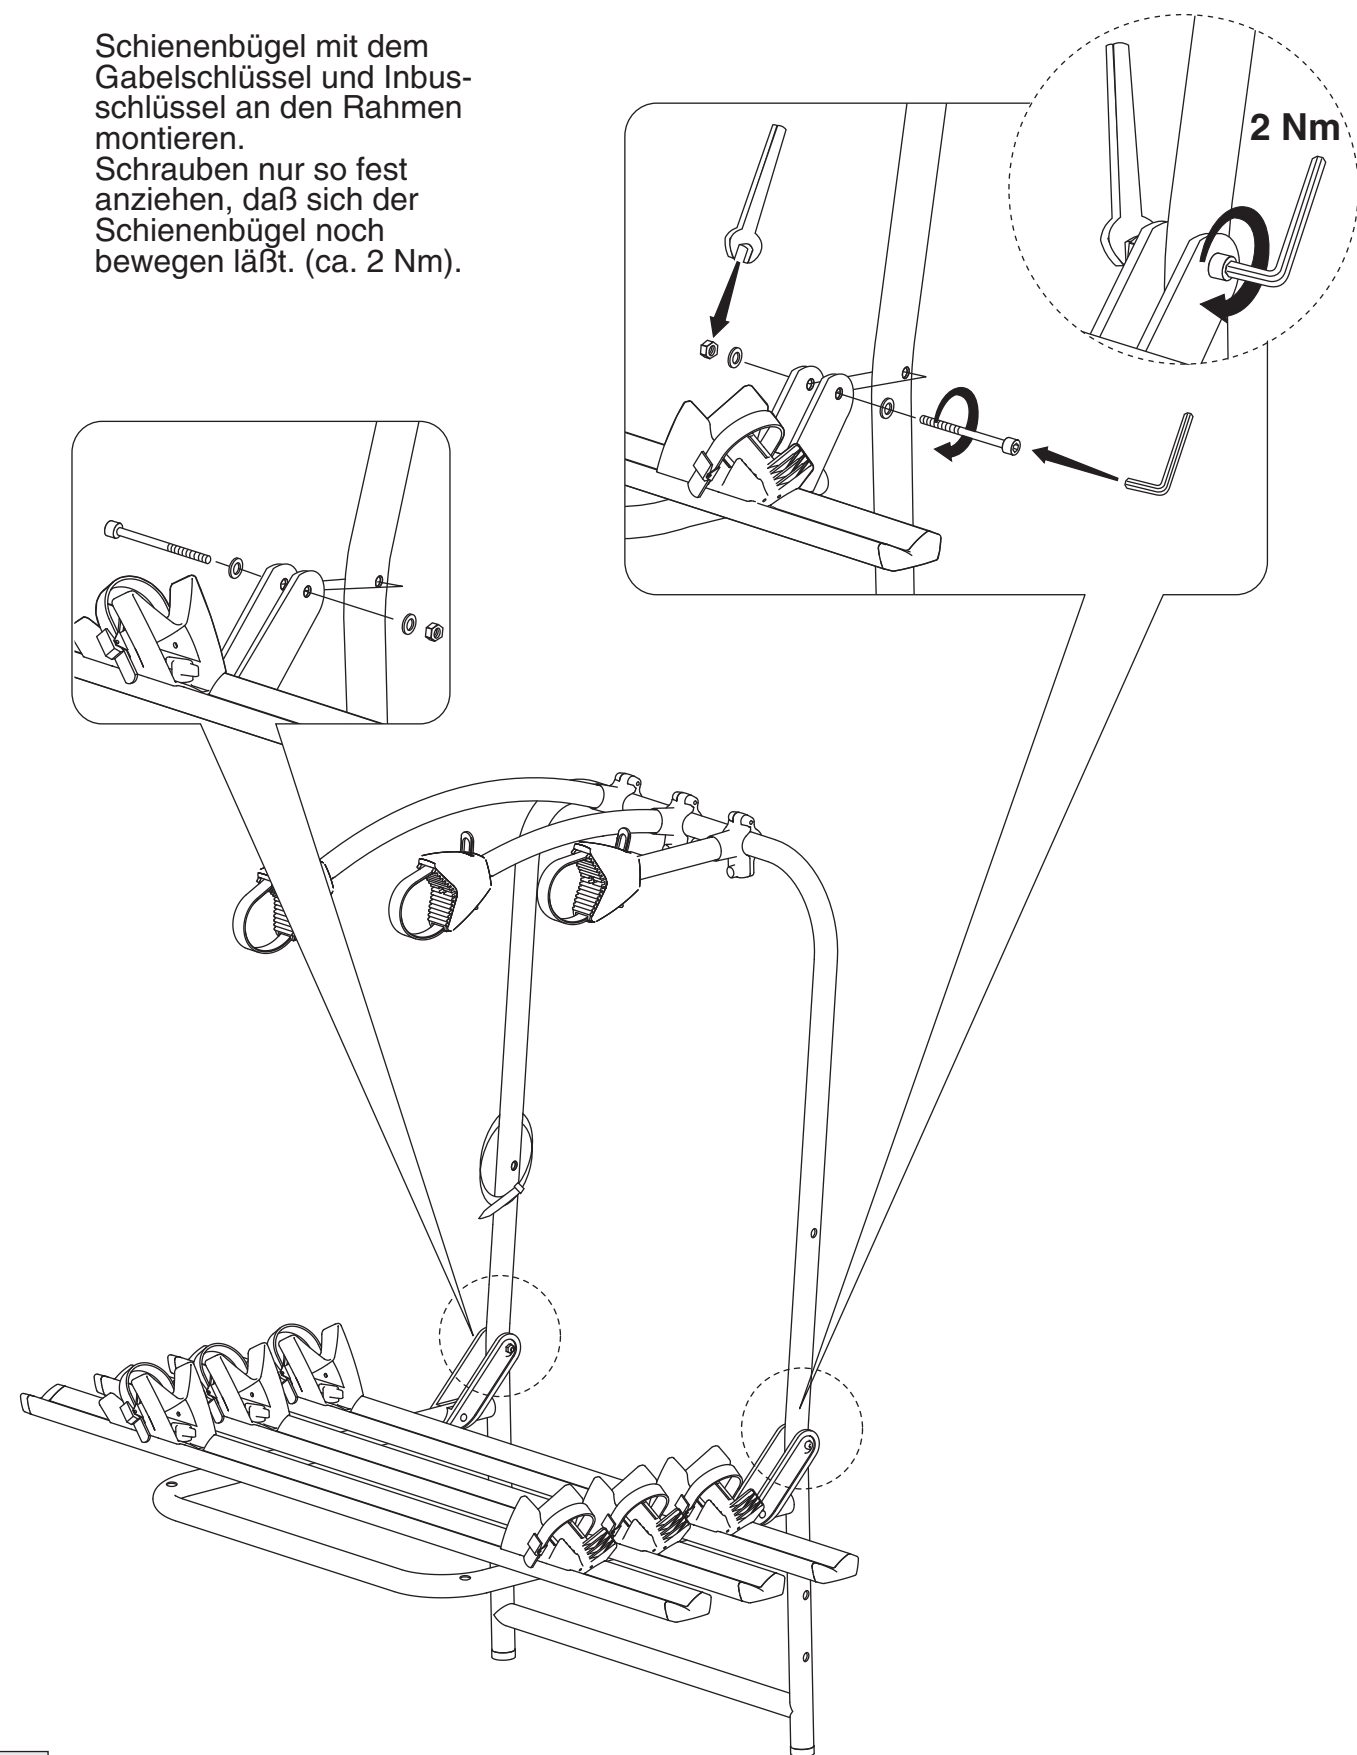

1

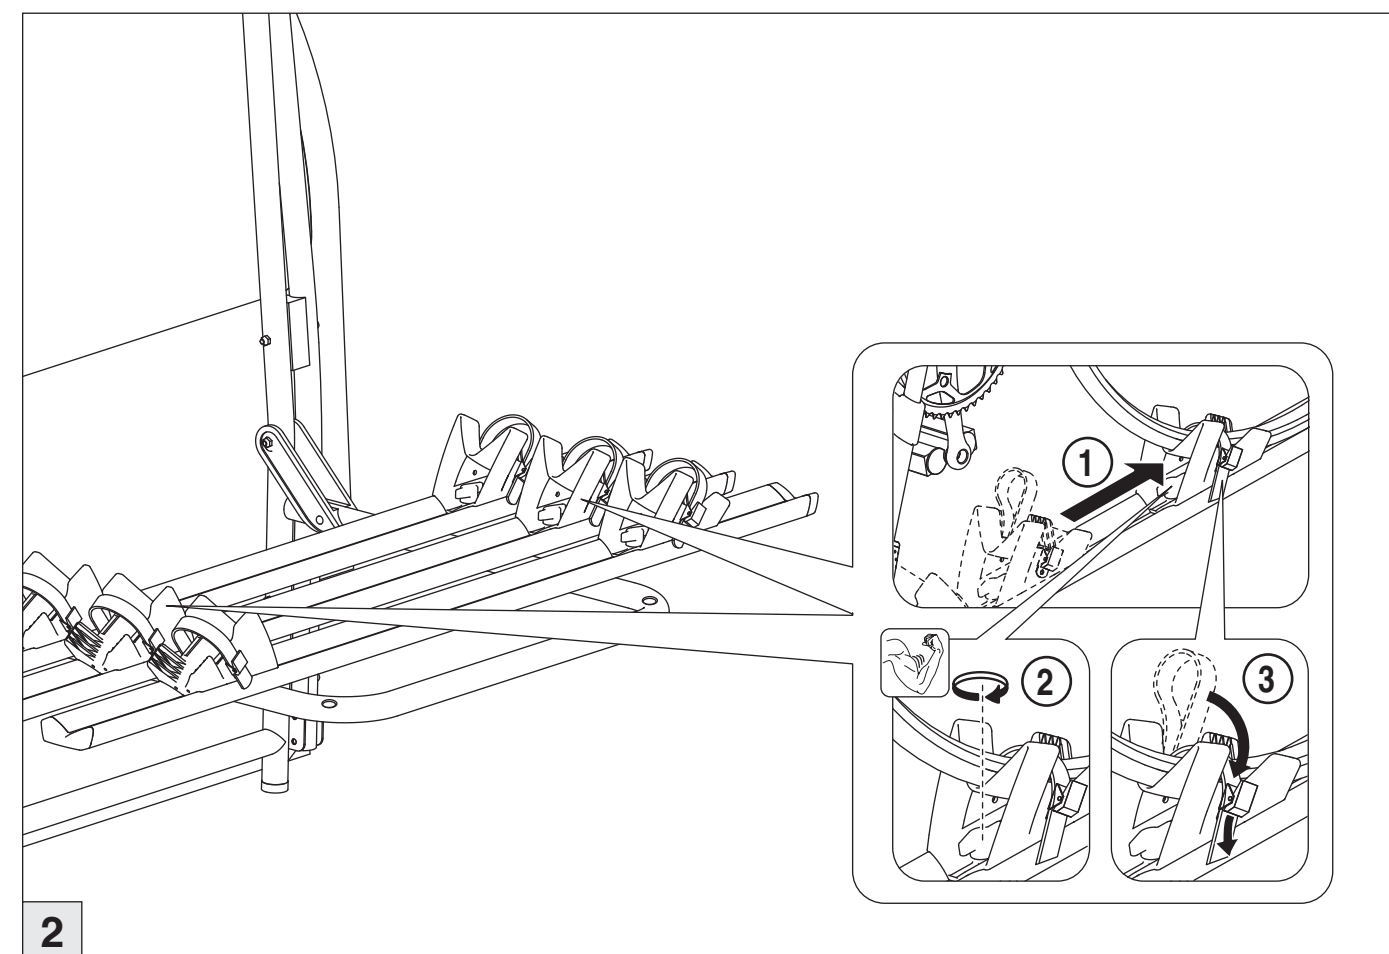

2

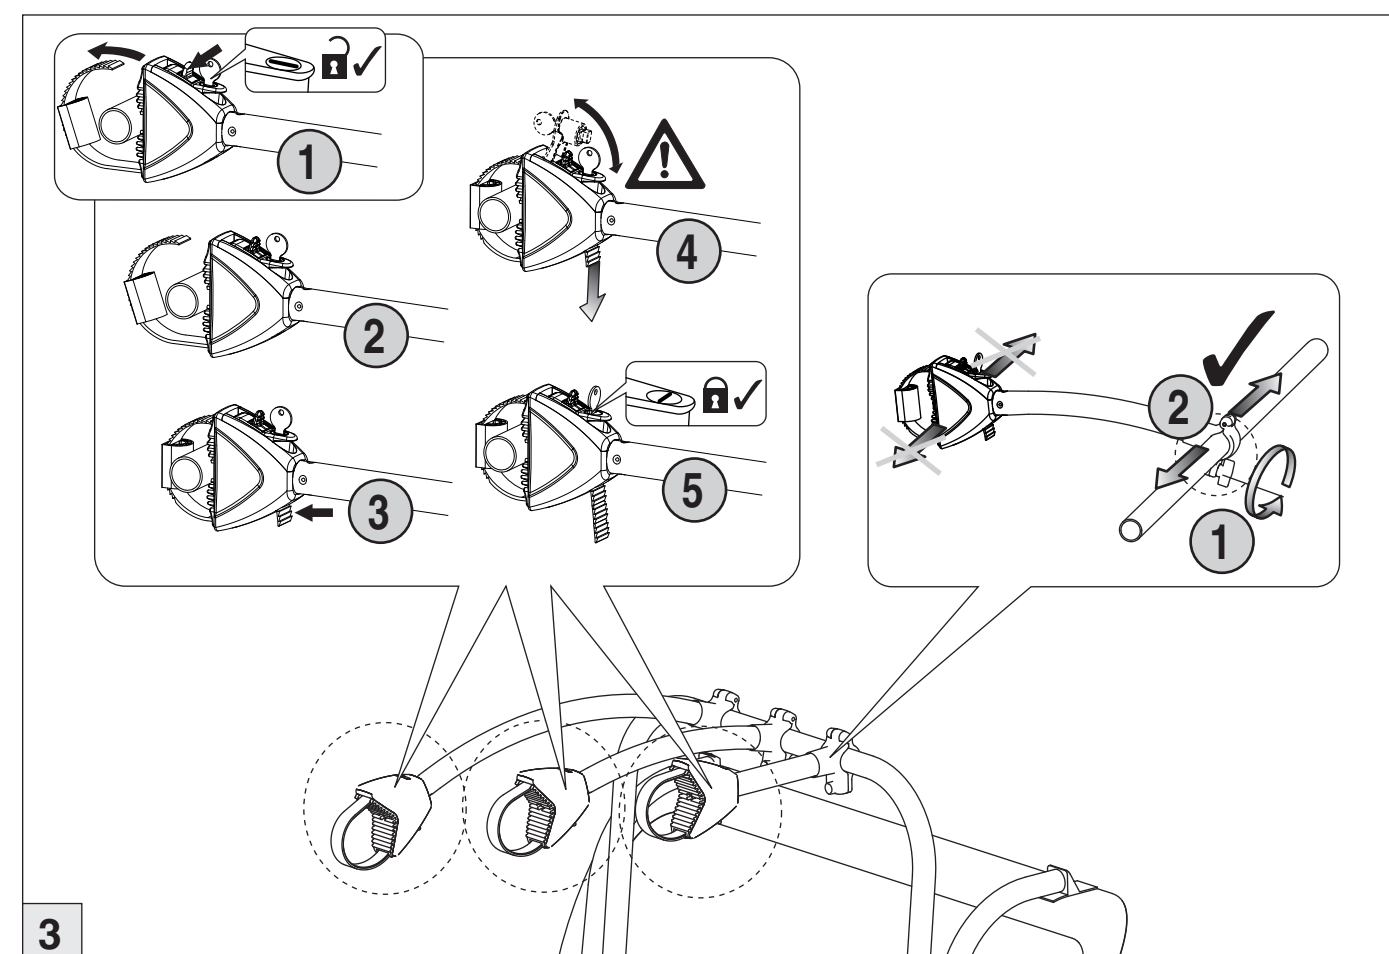

3