

---

## Fitting instructions

---

Make: Volkswagen

---

Tiguan; 2007->


---

Tiguan R-Line(Exterior); 2012->



---



Type: 4914

---

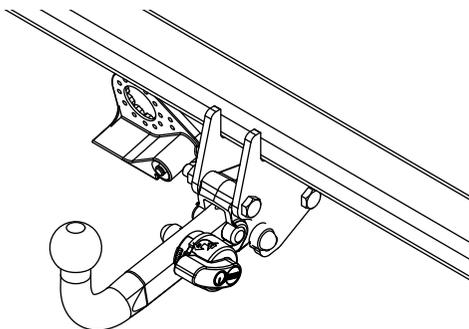



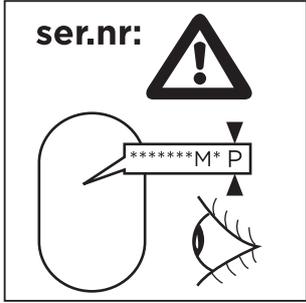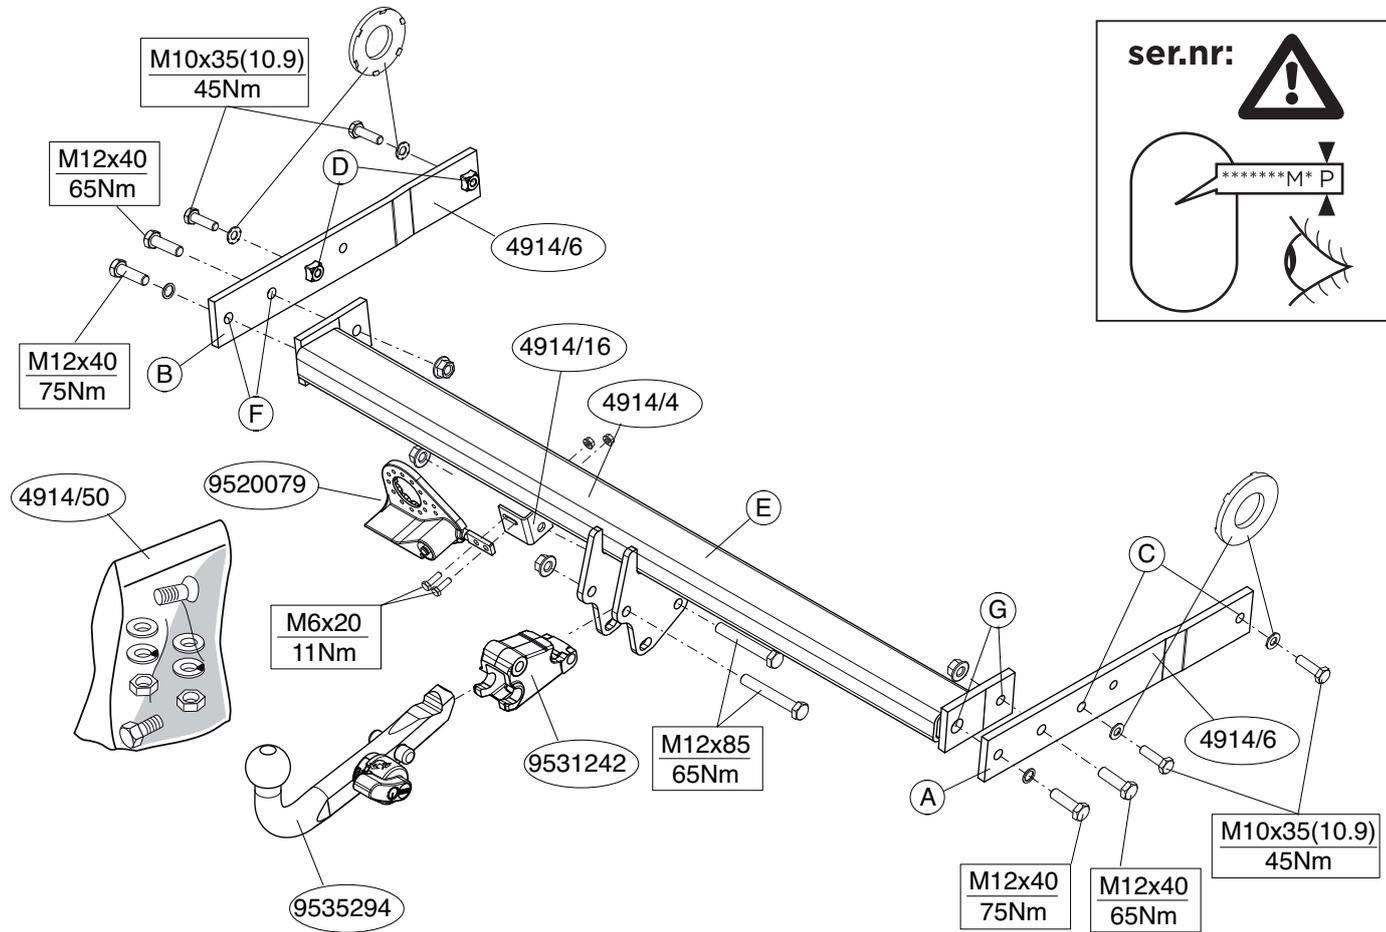

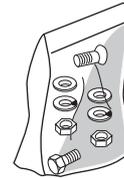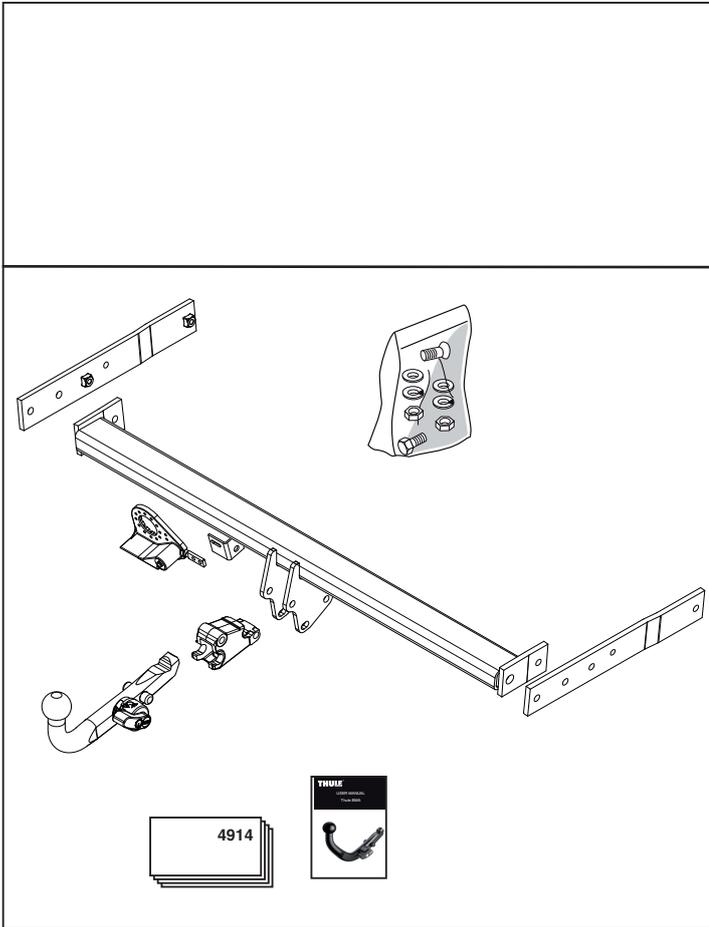

(2x) M6x20



(4x) M10x35 (10.9)



(4x) M12x40



(2x) M12x85



(2x) M12




(4x) M10



(2x) M6



(2x) M12

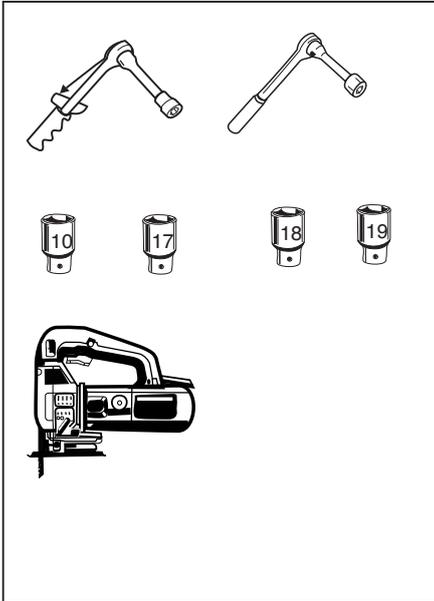

Couplingsclass: A50-X


euro tested

Approved

e11 00-6670

94/20/EC

**D-Value : 12,0 kN**

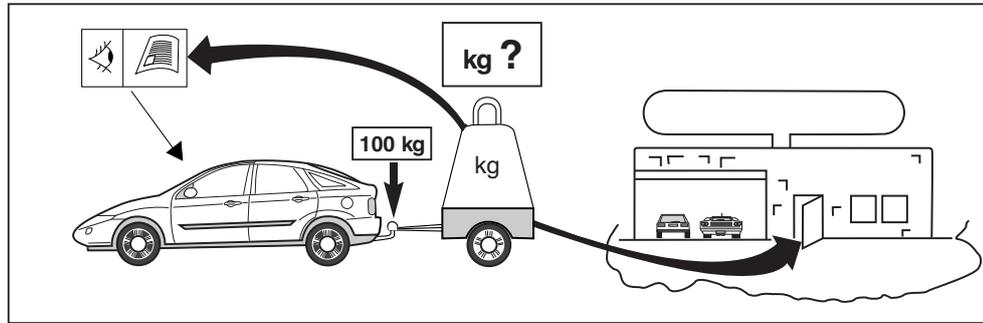



8.8

10.9

8

10

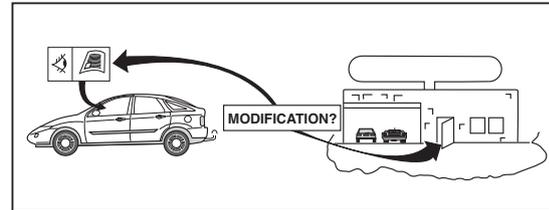

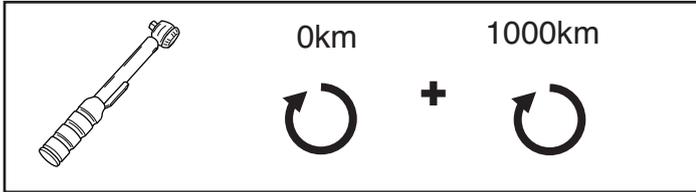

**NOTE:**

\* Should this installation process entail the cutting of the bumper – confirmation **MUST** be obtained by the installation engineer of the customer's acceptance prior to completion. Thule Towing Systems do not accept responsibility for any matters arising as a result of this miscommunication.

**All measurements are in mm!**

**HINWEISE:**

\* Die für das Fahrzeug zugelassene Anhängelast ist den Fahrzeug Unterlagen zu entnehmen. Bei Änderungen des Fahrzeuggewichtes muß die höchstzulässige Anhängelast gegebenenfalls aus dem D-Wert nachgerechnet werden.

Auskunft hierüber kann Ihr Fachhändler oder der TÜV geben.

\* Elektrische Anlage gemäß StVZO anbringen.

